


REMODEL HOUSING INSTALLATION

Step 1.

Carefully cut a hole in ceiling as shown below diameter.

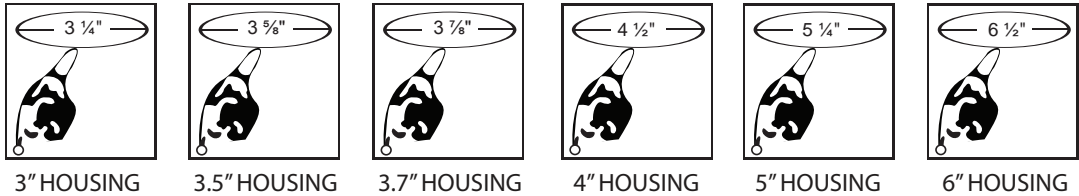


Step 2.

Pull supply wire through opening and make electrical connections. Refer to "electrical connections" section.

Step 3.

Insert the housing in ceiling cutout as illustrated.

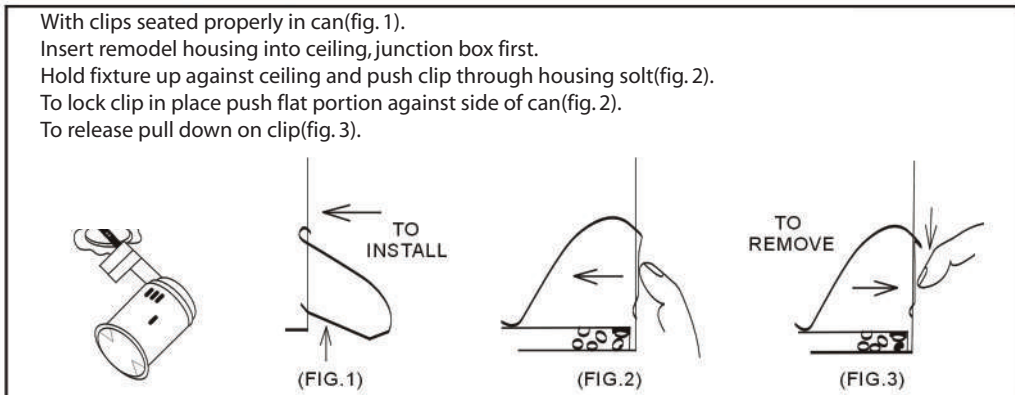

TRIM INSTALLATION

